



Operating instructions for the rental polo scoreboard

1. Position the scoreboard somewhere where everyone can see it; either in a corner at an angle or in the middle of a long side if no spectators are positioned along this side. On windy days, it is advisable to position it so that the wind blows at its side, not face on in case it can blow over. The range of the wireless remote control is approximately 400 yards so it will work anywhere.
2. Unlock the container at the back. The number for the combination lock may be obtained by ringing 07860 303 217
3. Unlatch the two metal stays which will be used to secure the top flap. Raise the top flap until it is vertical and latch each metal stay onto 2 latches on the side of the scoreboard.
4. Press the green ON button on the side. The green LED above should light up. After a few seconds, the scoreboard will go through its test sequence.
 - a. After 10 seconds all digits should show 8888888888.
 - b. After 5 seconds all digits should go blank.
 - c. After 5 seconds the top row should show something like P80 (P=Polo; the number is the version no).
 - d. After 5 seconds the time will show 7:00 and the scores zero (for outdoor polo). The scoreboard is now ready for operation.
5. You will find the wireless remote control unit near the batteries in the container at the back. Pressing START should start the clock counting down. Check each button works (note that NEXT PERIOD (next chukka) and RESET (next match) buttons will only work when the clock is stopped.
6. We strongly recommend that you spend 15 minutes familiarising yourself with the operation of the scoreboard, listening to the bell when 7 minutes elapses and the horn after a further 30 seconds. Try putting on some scores and especially make sure that you know how to subtract a score (hold down a score button (for 3-4 seconds) until the score reverses). Keep a score button pressed to reduce the score further.
7. Various teams' colours are stored in the container at the back. They slot in above the scores.
8. Read the instructions (normally next to the batteries).

Notes:

The ½ score can only be hung next to the left score so you may have to swap over the two team's colours.

At the end of play

1. Remove the ½ score and the two team's colours and store in the container at the back.
2. Press the red OFF button. The green LED above should extinguish.
3. Lower the top flap and secure. Latch the two metal stays.
4. Place the remote control unit in the container next to the batteries.

Problems? Ring 07860 303 217 for advice

Sporting Designs Ltd., One Barkers Field, Long Clawson, Leicestershire LE14 4PL
Tel 07860 303 217

mail@SportingDesigns.co.uk www.SportingDesigns.co.uk